Place the contact insert so that pin 1 is above.

Inlet side

Pin 21 - 24 +PE are not connected

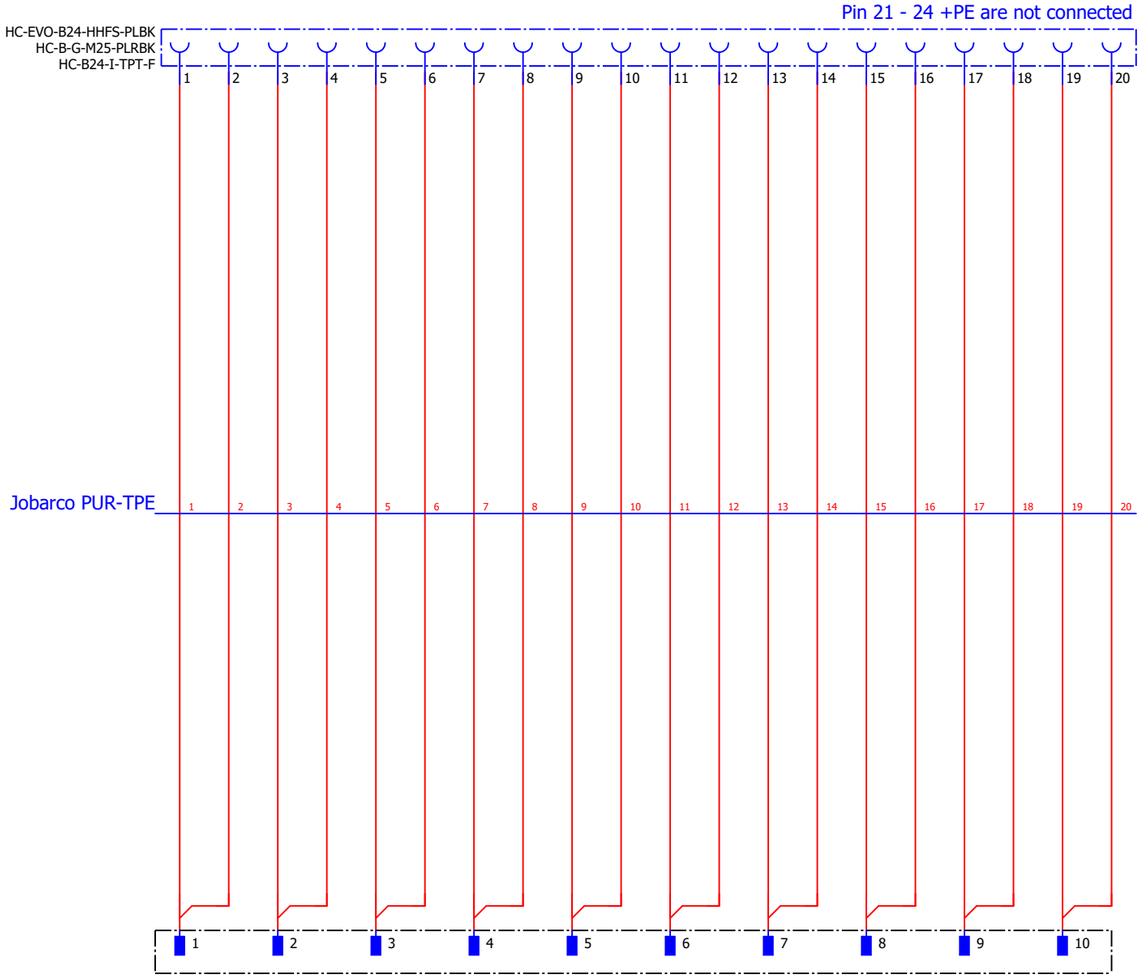

Outlet side

Pin 21 - 24 +PE are not connected

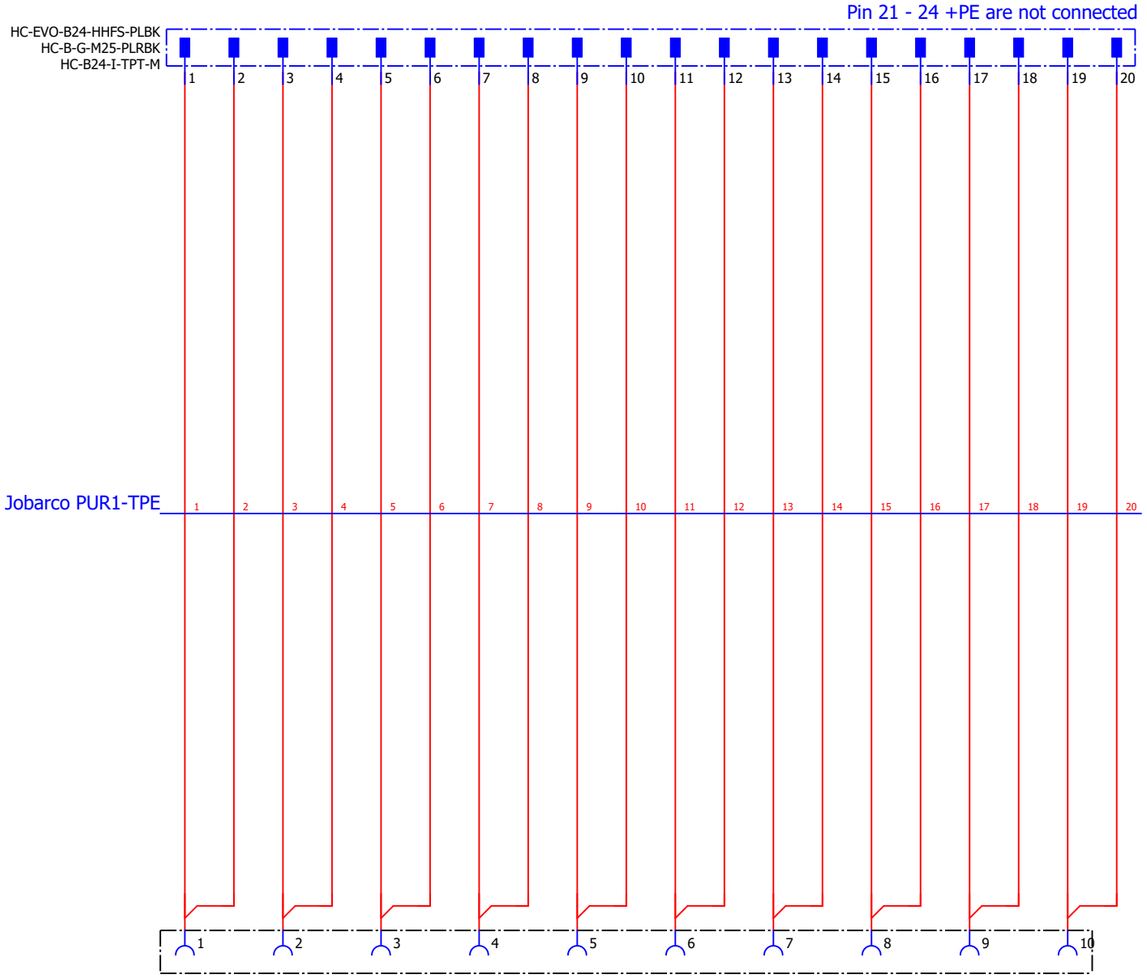

Choose a Jobarco PUR-TPE 1mm2 cable with at least twice the number of wires as the number of pins in the plug and connector.

A maximum of 10 pins can be tested via the universal plug.

Protected by copyright. Passing on as well as reproduction of this document, its utilization and communication of its contents are prohibited in as far as not expressly permitted.

			Project name Universal test cable	Order number		Universal cable wiring layout		=	&
			Multipole universal cable	Drawing number					Free for user
								+	Page 1
Modification	Date	Name	Creator K. Aka	Approved by		Date 10-6-2026	Ed. K. Aka		Page 1 from 1